


RADIO CONTROLS

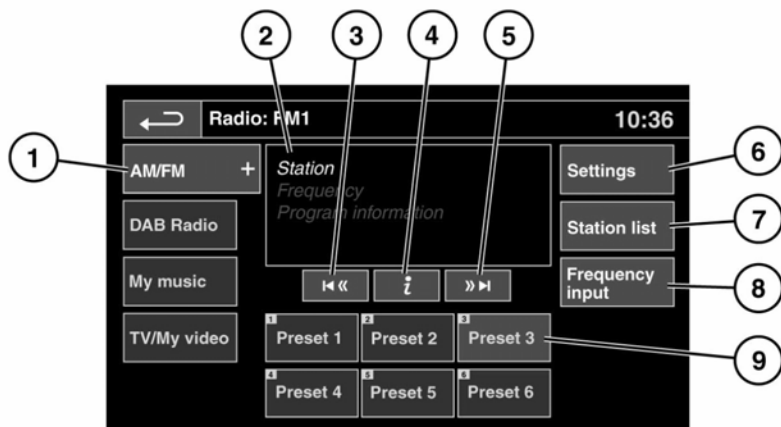

E155096

⚠ In the interest of safety, only operate or adjust the system when it is safe to do so.

⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

See **102, AUDIO/VIDEO CONTROLS**.

1. Touch **Radio** to display the **AM/FM** waveband selection soft key. Touch to view and select a waveband. Touch again to close. The waveband selection box will close automatically after 5 seconds without use.
2. Displays information about the current station.
3. Seek down:
 - Short touch to auto seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

***Note:** When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.*

4. Information: More information from the broadcasting station.
5. Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features: **RDS, Traffic, News, AF** and **REG**. See **109, RADIO DATA SYSTEM (RDS)**.