



To replace a bulb:

1. Insert a small flat-bladed screwdriver into the indent, as shown, and carefully lever out the side of the lamp unit and remove.
2. Twist the bulb holder 90 degrees counter-clockwise to access the bulb.
3. Pull to remove the bulb from the holder.

WIPERS SERVICE POSITION

Note: The Smart key must remain in the vehicle while the wiper blades are replaced.

Before changing a wiper blade, the wiper arms must be set in the 'service' position as follows:

1. Make sure the ignition is turned **OFF**.
2. Turn the ignition **ON** and then **OFF** again.

3. Immediately pull the wash/wipe control towards the driver (as if to command a single wipe), hold this position while turning **ON** the ignition again. The wipers will move to their service position.
4. When the new parts have been fitted, turn the ignition **OFF**. This will return the wipers to the park position.

Note: Fit only replacement wiper blades that are identical to the original specification.

SUNROOF RESET

If the battery is disconnected, or the power supply is interrupted, while the sunroof is partially open it will need to be reset.

Once the power supply is restored, reset the sunroof as follows:

1. Switch the ignition on.
2. Press the front of the sunroof switch, so that the sunroof is in the tilt position, then release the switch.
3. Press the front of the sunroof switch and hold for 30 seconds.
4. After 30 seconds, the sunroof will begin to move. Keep the front of the switch pressed until the sunroof has fully opened, then closed.
5. Once the open/close cycle has completed and the sunroof has stopped moving, release the switch.

The sunroof can now be operated as normal.

WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or the power supply is interrupted.

Once the power supply is restored, reset the windows as follows: