


# Exiting the vehicle

## MISLOCK

If one of the doors, the bonnet, or the Luggage compartment are not shut fully when the vehicle is locked using the Smart key or by Keyless locking, the vehicle will not lock and 2 warning tones will sound. Check that all of the doors, the bonnet, and the Luggage compartment are closed properly and lock the vehicle again.

If 1 or more of the doors fails to lock properly when a lock attempt is made using the Smart key, 2 warning tones will sound and 1 or more of the doors may not be locked.

## GLOBAL CLOSING


 **Make sure that no children, pets, or obstructions are in any open aperture before operating Global closing.**

Make sure that all of the doors are closed, then press and hold the lock button on the Smart key for 3 seconds, or press and hold the lock button on the exterior door handle. The vehicle will Single lock and the alarm will be fully armed immediately. After 3 seconds, all of the windows will close.

**Note:** *If the button on the door handle is released before the windows have fully closed, the windows will stop closing.*

**Note:** *Global closing can be enabled/disabled via the **Windows/mirrors** menu from the **Security/Vehicle** menu on the Touch screen. See 65, **VEHICLE SETTINGS**.*

## KEYLESS LOCKING

 Remove all Smart keys and emergency key blades from the vehicle when it is left unattended. This will help to prevent the alarm from being disarmed and therefore, help to prevent theft.



The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including in a laptop bag), games console etc.

The vehicle will not lock automatically.

To Single lock the vehicle, press the button on the door handle once. The hazard warning lamps will flash once as confirmation (in some markets, an audible warning will sound).

To Double lock the vehicle, press the button twice within 3 seconds. The hazard warning lamps will flash twice (with a long second flash). In some markets, a double audible warning will sound.

**Note:** *Keyless locking will only activate if all of the doors, the bonnet, and the Luggage compartment are closed, and the Smart key is outside the vehicle. If the above conditions are not met, 2 audible error warnings will sound.*

## FULL ALARM



**No modifications or additions should be made to the Anti-theft system. Such changes could cause the system to malfunction.**

To set Full alarm protection, make sure that all of the windows and the sunroof are closed. On vehicles fitted with Double locking, press the lock button twice within 3 seconds. The hazard warning lamps will flash twice to confirm the alarm state and in some markets, an audible tone will sound.

**Note:** *If the alarm is armed and a window or the sunroof are left open, the alarm may sound due to movement of air currents, detected by the intrusion sensors in the front interior light console.*