

Instrument panel

METRIC/IMPERIAL/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial, and mixed units in the **Trip Computer** menu within the **Set-up** menu. See **64, TOUCH SCREEN SETUP**.

Note: *Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of metric or imperial units.*

SERVICE INTERVAL INDICATOR


An approaching service interval will be notified to the driver via the Message centre, as a distance remaining until the service is due. Once the distance is exceeded, **SERVICE REQUIRED** is displayed in the Message centre.

❗ If no Service interval indicator is displayed during the vehicle's service cycle, make sure the vehicle is serviced in accordance with the intervals, as stated in the relevant Service Interval Plan, which is supplied in the vehicle's literature pack.

GEAR SHIFT (GREEN)

The currently selected gear is displayed in a large type size, within a circle, in the middle of the Message centre.

Above this is the Gear shift indicator. The currently selected gear will be displayed in a larger size than the other numbers in the row. When transmission **S** is selected, the next gear up will illuminate green at the recommended up-shift gear change point.

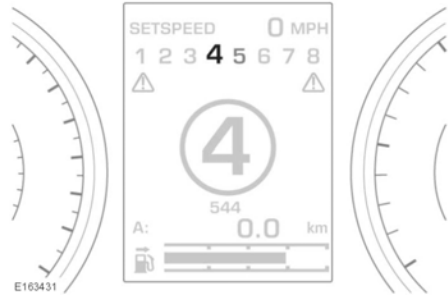

When transmission **S** is selected and Dynamic mode is used, transmission up-shifts are fully controlled by the driver. This means that the transmission will not change up a gear automatically, even when the engine's revolution speed limit is reached.