

- **Voice profile:** The Voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a Voice profile for either **User 1** or **User 2**, it is necessary to complete a training programme first.
- To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
- **Voice feedback:** Select **On/Off**.
- **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the Voice system training programme, designed to enable the system to better recognise the vocal characteristics of a user.
- Select **User 1** or **User 2** and follow the on-screen and audible instructions. See **124, VOICE TRAINING**.

The training session can be cancelled, at any time, by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **123, USING VOICE CONTROL**.

TRIP COMPUTER SETTINGS

Trip Computer: Select to switch Trip computer readings between **Trip A**, **Trip B** and **Trip Auto**. Select **Reset** to zero the Trip computer readings. Select **Units** to switch the Trip computer readings between Imperial and Metric measurements.

VEHICLE SETTINGS

Scroll down through the menu until the desired feature is displayed, then select **On** or **Off**, as appropriate.

Security: Select to enable/disable or alter the settings of the following:

- Single/Multi-point entry (2 stage unlocking).
- Alarm sensors (interior and tilt).
- Drive-away locking.

Note: If Drive-away locking is switched on, also select the desired activation speed, 8, 16 or 32 km/h (5, 10 or 20 mph).

Windows/mirrors: Select to enable/disable:

- Global opening/closing of the windows and sunroof.
- Exterior mirror dip when reversing.
- Automatic folding/unfolding of exterior mirrors when the vehicle is locked/unlocked.
- Interior mirror dimming.

Units: Select to switch between Imperial and Metric measurements.

High beam assist: Select to:

- Turn High beam assist on or off.
- Set High beam assist for the side of road being driven on.

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the Luggage compartment and glove box. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

1. From the **Home menu**, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.