

Tow bar	
mounting points.....	79
Tow eye (front).....	202
Towing	
a trailer.....	76
checks	
breakaway cable.....	77
calculating weight.....	77
essential checks.....	77
lights.....	77
nose weight limit.....	77
tow ball.....	77
eyes.....	202
tow bar dimensions.....	79
tow bar mounting points.....	79
trailer electrical connections.....	76
trailer sway mitigation.....	78
weights.....	77
tracDSC.....	87
Traction control	
switching between DSC and tracDSC.....	88
switching off.....	88
switching on.....	88
tracDSC.....	87
Traffic message channel (TMC).....	143
Trailer	
electrical connections.....	76
towing weights.....	77
Transmission	
automatic.....	84
driver controls.....	
emergency park release.....	203
identification number.....	207
limp home mode.....	86
winter mode.....	87
Transmission park release.....	203
Transmitters	
smart key.....	215
Transporting the vehicle.....	203
Trip computer.....	41, 65
average speed.....	41
fuel consumption.....	41
fuel range.....	41
reset.....	41
trip distance.....	41
Turning on the engine	
engine block heaters.....	81
TV	
controls.....	119
Tyre pressure checking after a repair.....	196
Tyre pressure monitoring system (TPMS).....	192
tyre care.....	183
valves.....	188
warning lamp.....	45
Tyre pressures.....	193
Tyre repair kit	
checking pressures.....	196
repair procedure.....	195
safety information.....	194
using.....	194
Tyres	
age degradation.....	189
changing.....	193
flat spots.....	189
important information.....	201
Indian regulations.....	191
pressures.....	183
repair kit.....	194
repair kit use.....	194
repair procedure.....	195
replacements.....	188
snow chains.....	190
speed ratings.....	183
temporary use spare.....	193
TPMS.....	192
warning lamp.....	45
tyre care.....	183
tyre repair safety.....	194
tyre wall markings.....	182
use of spare tyre.....	201
valves.....	188
vehicle loading.....	193
wall markings.....	182
winter.....	189
U	
Understeer.....	87
Unlocking.....	13