

LUGGAGE COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	250A	-	Battery control module.
F2	-	-	-
F3	30A	Green	Electric parking brake.
F4	40A	Orange	Audio system amplifier.
F5	40A	Orange	Left side retractable seat belt.
F6	40A	Orange	Diagnostic link.
F7	-	-	-
F8	-	-	-
F9	40A	Orange	Electronic differential.
F10	40A	Orange	Right side retractable seat belt.
F11	-	-	-
F12	-	-	-
F13	10A	Red	Sportbrake air suspension.
F14	20A	Yellow	Dual battery module.
F15	25A	Clear	Sportbrake power operated tailgate.
F16	25A	Clear	Driver's door module.
F17	10A	Red	Sportbrake constant variable damping.
F18	15A	Blue	Accessories.
F19	5A	Tan	RF receiver.
F20	5A	Tan	Gateway module.
F21	5A	Tan	Power amp detect.
F22	5A	Tan	SDARS, TV, DVD, DAB radio.
F23	15A	Blue	Audio module.
F24	15A	Blue	Touchscreen.
F25	-	-	-
F26	25A	Clear	Passenger's door module.
F27	-	-	-
F28	15A	Blue	Accessories.

Fuse No	Rating (amps)	Fuse Colour	Circuit
F29	-	-	-
F30	20A	Yellow	Remote function actuator.
F31	5A	Tan	Remote function actuator.
F32	5A	Tan	Tyre pressure monitoring system.
F33	10A	Red	Navigation.
F34	10A	Red	Gear shift module, Communications media module.
F35	5A	Tan	Fuel pressure valve, W2A.
F36	-	-	-