


When regeneration is complete, the warning text is cleared automatically.


Note: A small increase in fuel consumption may be noticed temporarily during regeneration.


ARDUOUS DRIVING CONDITIONS


When a vehicle is operated in severe or arduous conditions, more frequent attention must be paid to the servicing requirements. Refer to your Service book for further details, this is supplied in the vehicle's literature pack, or contact a Dealer/Authorised Repairer for advice.


SAFETY IN THE GARAGE

 **If the vehicle has been driven recently, do not touch exhaust and cooling system components until the engine has cooled.**


 **Never leave the engine running in an unventilated area.**

 **Do not work beneath the vehicle with a jack as the only means of support.**

 **WARNING - THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.**


 **Keep your hands and clothing away from drive belts, pulleys and fans. Some fans may continue to operate after the engine has stopped.**


 **Remove metal wrist bands and jewellery, before working in the engine compartment.**


 **Do not touch electrical leads or components while the engine is running, or with the starter switch turned on.**

 **Do not allow tools or metal parts of the vehicle to make contact with the battery leads or terminals.**

FUEL SYSTEM

 **Under no circumstances, should any part of the fuel system be dismantled or replaced by anyone other than a suitably qualified vehicle technician.**


 **Make sure that sparks and naked lights are kept away from the engine compartment.**

 **Wear protective clothing, including, where practicable, gloves made from an impervious material.**

USED ENGINE OIL

Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.

OPENING THE BONNET

 Do not attempt to open the bonnet if the Pedestrian protection system has deployed.



E143958

1. Pull the handle, located in the left side front footwell, to release the 2 bonnet locks.