


CLIMATE CONTROL

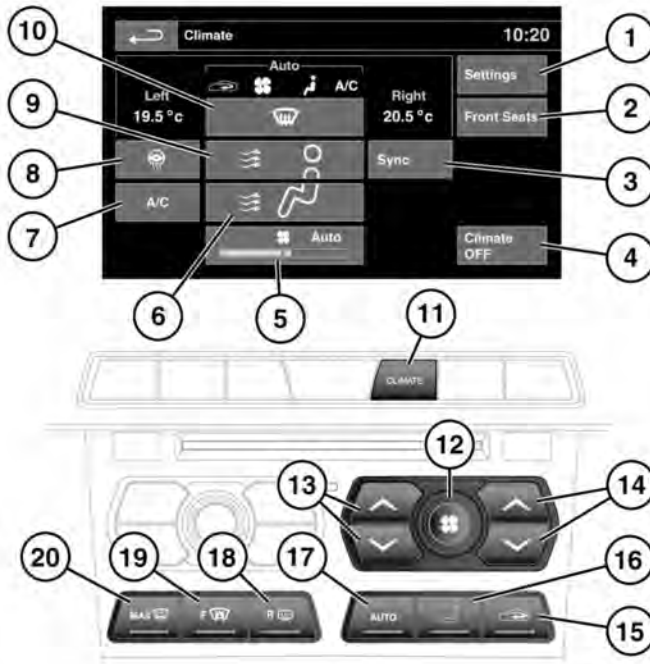

E182557

To access the Climate menu on the Touch screen, select **Climate** from the **Home menu**.

1. Touch to change the personal climate zone settings, to set the vent rotation mode and the Automatic air recirculation sensor control settings.
2. Touch to access the seat heating/climate seat menu.
3. Touch to synchronise the passenger's climate zone to the driver's settings.
4. Touch to turn Climate control off.
5. Indicates blower speed.
6. Touch to select air distribution to the feet.
7. Air conditioning on.

8. Touch to select the steering wheel heater on/off settings.
9. Touch to select air distribution to the face.
10. Touch to select air distribution to the windscreen.
11. Press to short-cut to the Touch screen **Climate** menu.

Note: Not fitted on vehicles with the Navigation system.
12. Blower speed: Rotate to adjust the blower speed. Blower speed is automatically set in Auto mode. Adjusting the blower speed will cancel Auto mode. Press the centre button to switch Climate control on/off.