

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will also sound and the message **DSC OFF** is displayed in the Message centre.

If Trac DSC is selected, the warning lamp will also illuminate and the message **TRAC DSC** is displayed for 4 seconds.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## ADAPTIVE CRUISE CONTROL (AMBER)



Illuminates when Adaptive cruise control is active, to indicate that the vehicle is in Follow mode.

## FORWARD ALERT (AMBER)



Illuminates when Forward alert is active.

## AIRBAG (AMBER)



Illuminates if the airbag system develops a fault. Seek qualified assistance as soon as possible.

## AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic speed limiter is active.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when 1 or more tyres are significantly under-inflated. The vehicle should be stopped as soon as possible and the tyres checked and inflated to the recommended pressure.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## HIGH BEAM ASSIST (GREEN)



Illuminates when High beam assist has switched on the high beams.

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

*Note: Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.*