

LABEL LOCATIONS




Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

Labels are applied to draw your attention to important subjects (e.g. tyre pressures, airbags, engine compartment hazards, etc.).

Additional information labels may also be found at these locations.

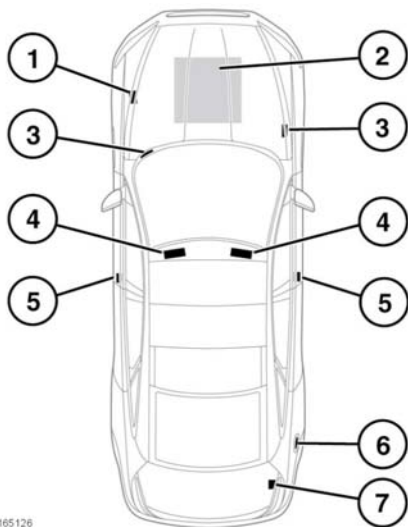

E165126

1. Air conditioning label - Left-side inner wing.
2. Engine number:
2.0 litre petrol, stamped into the engine mounting flange.

All other engines, located on the front of the right-side cam cover.

3. The VIN is stamped on a plate which is visible through the lowest part of the left side of the front windscreen. The VIN is also stamped into the right side suspension tower.

Note: *If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.*

4. Airbag label - Sun visor.
5. Vehicle Identification plate, including the Vehicle Identification Number (VIN) and recommended maximum vehicle weights - Located on the left-side B pillar.
Passenger airbag label - Passenger side.
Airbag warning label - Base of B pillar on the driver's side.
Tyre pressure label - Driver's side.

6. Fuel specification label - Inner face of fuel filler flap.
7. Battery warning symbols - Top face of battery.

It is important that you are familiar with these subjects to make sure that your vehicle and its features are used safely. Using the index at the back of this handbook, refer to the relevant topic for more information.

TRANSMISSION NUMBER

The transmission number is located on a label attached to the transmission casing.

VEHICLE BUILD DATE PLATE

The vehicle built date is shown on the VIN plate.