

## STARTING THE ENGINE




**Never start the engine, or leave it running, when the vehicle is in an enclosed space. Exhaust gases are poisonous and can cause unconsciousness and death if inhaled.**



If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic convertor due to unburnt fuel passing through the exhaust.

**Note:** *The Smart key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), game console etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.*

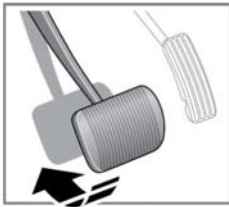

E142752



To start the engine:

1. Make sure that a valid Smart key is inside the vehicle.
2. Make sure that Park (P) or Neutral (N) is selected.
3. Firmly press the brake pedal.
4. Press and release the engine **START/STOP** button.

**Note:** *For vehicles with diesel engines, the delay period before cranking begins will be longer in low ambient temperatures due to extended glow plug operation. During this extended delay the brake pedal must remain pressed.*

Once the engine has started, the brake pedal can be released if it is safe to do so.

## SWITCHING OFF THE ENGINE

When the vehicle is stationary:


1. Make sure that the vehicle is parked with Park (P) selected and the parking brake applied.
2. Press and release the engine **START/STOP** button.



It is not advisable to switch off the engine while the vehicle is moving. However, if a situation arises where engine switch off is urgent, the following procedure applies:

1. Press and hold the engine **START/STOP** button for 2 seconds, or
2. Press and release the engine **START/STOP** button twice within 3 seconds.

## SWITCHING ON THE IGNITION

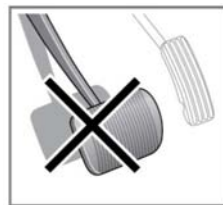

E142753



To switch on the ignition without starting the engine: