




To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given:

1. Connect the positive (Red) cable to the positive terminal (in the engine compartment) of the disabled vehicle.
2. Connect the negative (Black) cable to the negative terminal (in the engine compartment) of the disabled vehicle.
3. Connect/switch on the starting aid.
4. Start the engine and allow it to idle.
5. Disconnect/switch off the starting aid.
6. Disconnect the negative (Black) cable from the negative terminal of the vehicle.
7. Disconnect the positive (Red) cable from the positive terminal of the vehicle.

CHARGING THE VEHICLE BATTERY

-  The battery must be disconnected and removed from the vehicle before charging.
-  Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/Authorised Repairer.

REPLACING THE VEHICLE BATTERY

-  Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/ Authorised Repairer.



Used batteries must be disposed of correctly, as they contain a number of harmful substances. Seek advice from your Dealer/Authorised Repairer and/or your local authority.