

Press to close the roof from tilt. From the fully open position, press once to close to the tilt position, then press again to close fully.

Roof movement can be halted at any time by pressing the button again.

**Note:** *The front roof blind will open when the roof is tilted or when the roof is fully opened.*

- ❗ The roof blinds are electrically operated. Do not try to operate them manually. If the sunroof encounters resistance when closing it will stop, and then open fully. This is to prevent serious injury or damage to the mechanism.

5. Rear screen sun blind.
6. Rear sunroof blind: One push of the button will fully open or close the blind. Opening or closing cannot be halted part-way.
7. Front sunroof blind: One push of the button will fully open or close the blind. Opening or closing cannot be halted part-way.

**Note:** *The blind cannot be closed when the sunroof is open.*

8. Rear screen sun blind.
9. Rear sunroof blind: One push of the button will fully open or close the blind. Opening or closing cannot be halted part way.

## SIDE WINDOW BLINDS

- ❗ Before operating the rear door electric sun blind, make sure that no objects or parts of the body are in a position to obstruct the operation of the sun blind.

### Rear door electric sun blinds

To raise the door sun blind: With the rear window fully closed, pull and release the rear door window switch.

To lower the door sun blind: Push down and release the rear door window switch.

**Note:** *The door sun blinds will operate for 5 minutes after the engine is turned off, unless a door is opened.*

Door sun blind restrictions:

- All rear window switches will operate the respective door sun blinds.
- A door sun blind will only operate if the rear window is fully closed.
- The door sun blinds can only be fully raised or fully lowered, there is no part-way position.
- Anti-trap protection: If an obstruction is detected, the door sun blind will reverse to the fully opened or closed position.
- Anti-play/tamper protection: Deactivation will occur if the door sun blind is operated repeatedly in a short space of time (40 movements within 60 seconds). The sun blind will not operate again for approximately 60 seconds.

**Note:** *If the rear door electric sun blind fails to operate correctly, the blind operation may need to be reset. See 163, SIDE WINDOW BLIND RESET.*

## ONE-TOUCH WINDOW OPERATION

The front windows have one-touch open operation. Briefly press the switch down fully and release, the window will lower until fully open.

The rear windows open in 2 stages:

- Briefly press the switch down fully and release; the window will open 65 - 75 mm (2.5 - 3 inches) to the comfort stop position.