



Disconnect: Use to end or reject a call.



No phone connected.



Phone signal strength indicator.



Phone battery level indicator.



Bluetooth: Indicates that a **Bluetooth®** wireless technology device is connected.



Tick: Indicates that a **Bluetooth** wireless technology device is paired.



Voicemail: Press and hold to dial the stored voicemail number.




Scroll bar up arrow: Use to scroll up lists of detected phones, calls or phonebook entries.



Scroll bar down arrow: Use to scroll down lists of detected phones, calls or phonebook entries.

STEERING WHEEL CONTROLS

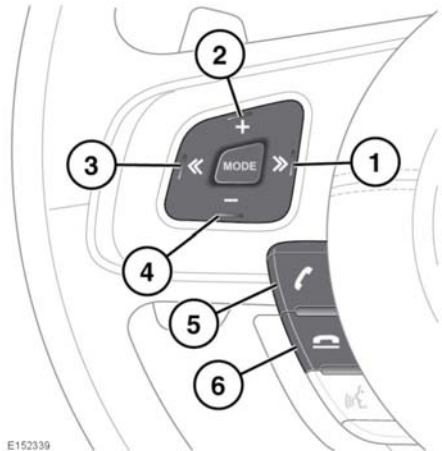

E152339

1. Press to scroll to the last 10 list and received calls.
2. Increase the volume when in a call, scroll up a displayed list or number listed for a stored contact.
3. Press to scroll back through the received calls, last 10 list and finally to exit the list.
4. Decrease the volume when in a call or scroll down a displayed list or a number listed for a stored contact.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the Last 10 dialled list. Press and hold to access the phonebook list view.
6. Disconnect switch: Press to end or reject a call.

Note: When scrolling through a phonebook or Last 10 list, each contact is also displayed in the Message centre.

Note: In order to scroll through any last 10 list, the 'phone' button (5) must be pressed first.