


VIDEO MEDIA PLAYER CONTROLS

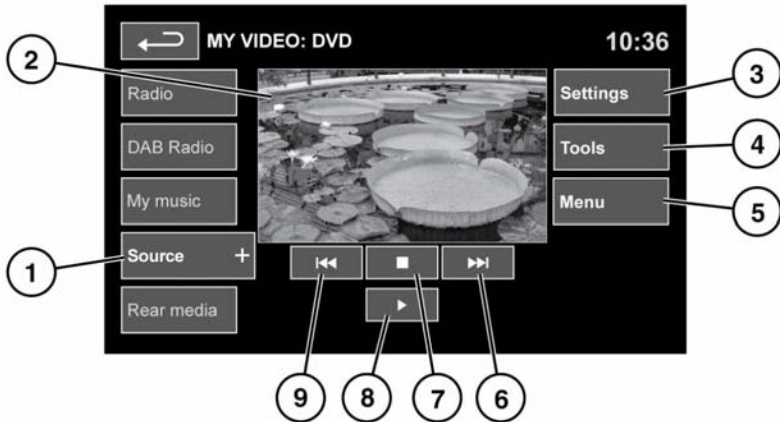

E151101

! In the interest of safety, only operate, adjust or view the system when it is safe to do so.

! Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. Source:** TV band/video input selection. Touch the + icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

Note: After 5 seconds without use, the TV/My video menu will close.

- 2.** Preview screen for video media information: Touch to select full screen mode. Short touch the screen again to view the controls at any time. To return to preview mode, touch and hold the full screen view.
- 3. Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.

VOD allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **103, LICENSING**.

- 4. Tools:** The following options can be selected:
 - **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
 - Subtitles.
 - Angle.
 - Audio.
 - Top menu.
- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6.** Seek up: Select to view the next DVD chapter or to scroll through video media files.