


ELECTRIC WINDOWS

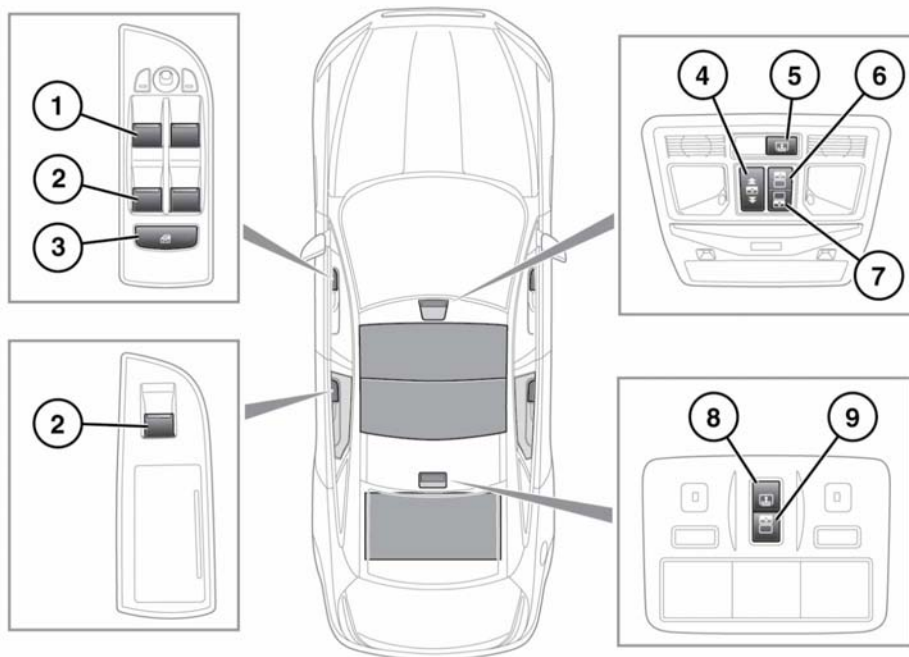

E152956

1. Front window switches: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

⚠ **Make sure that the Smart key is removed when leaving passengers in the vehicle. This will prevent unsupervised operation of the windows, sun blinds and sunroof, which may result in injury.**

ⓘ Any ice should be removed from the windows prior to operation.

2. Rear window switches: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

Note: The rear window switches are also used to operate the rear electric door blinds. See **61, SIDE WINDOW BLINDS**.

3. Rear isolator switch: Isolates the rear windows, rear door handles, rear electric seats, door sun blinds and rear sunroof blind.

⚠ **If children are carried in the rear seats, the isolator switch should be used to prevent operation of the rear door handles and rear windows.**

4. Sunroof: Press once to tilt the roof. Once tilted, press again to open the roof.