


TOUCH SCREEN HOME MENU

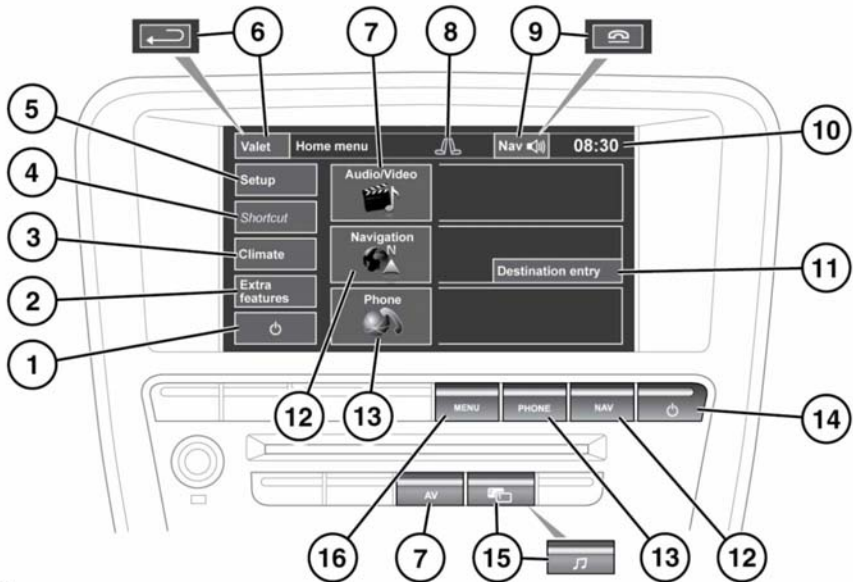

E 152309

- ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
 - ⓘ Avoid spilling or splashing liquids onto the Touch screen.
1. Touch to turn the screen off.
 2. Touch to select the **Extra features** menu. See **65, EXTRA FEATURES**.
 3. Touch to select the **Climate** menu. See **66, FRONT CLIMATE CONTROL**.
 4. To add or change the shortcut, see **64, TOUCH SCREEN SETUP**.
 5. Touch to select the Touch screen **Setup** menu.
 6. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
 7. Touch or press to select the **Audio/Video** menu. See **101, AUDIO/VIDEO CONTROLS**.
 8. Seat icons appear to indicate when front seat heating (Red) is on or (Blue) when front seat cooling is on. See **66, FRONT CLIMATE CONTROL**.
 9. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
 10. Touch to adjust the time/date.
 11. Touch for a shortcut to the **Destination entry** menu. See **140, SETTING A DESTINATION**.