




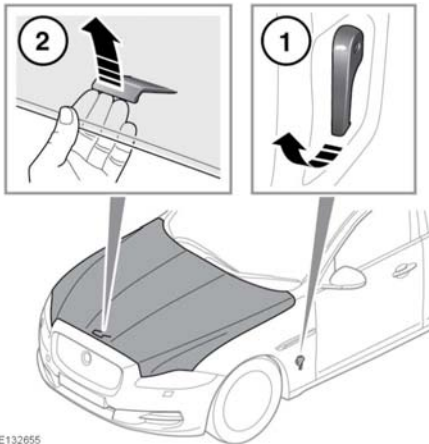
-  **Wear protective clothing, including, where practicable, gloves made from an impervious material.**

USED ENGINE OIL

-  Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.

OPENING THE BONNET

-  Do not attempt to open the bonnet if the pedestrian protection system has deployed.




1. Pull the bonnet release handle located in the left-side front footwell.
2. Lift the bonnet safety catch lever located below the centre point of the bonnet, and raise the bonnet.

CLOSING THE BONNET

-  **Do not drive with the bonnet retained by the safety catch alone.**


1. Lower the bonnet until the safety catch engages. Using both hands, press the bonnet down until the catches click.
2. Check that both catches are fully engaged by attempting to lift both sides of the front edge of the bonnet. This should be free from all movement.

UNDER BONNET COVERS - REMOVAL

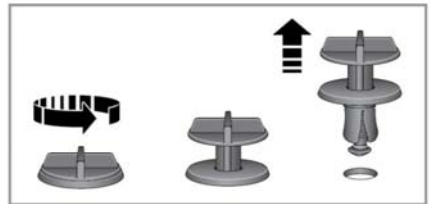

1. Release and remove the turnbuckle clips securing the cover.
2. Lift the edge of the cover and slide to remove.

UNDER BONNET COVERS - REFITTING

-  Before refitting the underbonnet cover, make sure that no pipes, cables or other items, have been trapped between the cover and casing.