

Exterior lights

- Dirty, damaged, or misted windscreen.
- Oncoming vehicles partially obscured by a central highway barrier.

To turn off High beam assist, turn the rotary control from **AUTO** to headlamps on.

The High beam assist feature can be disabled/enabled using the **Vehicle set-up** menu, **36, INSTRUMENT PANEL MENU**.

HEADLAMPS - DRIVING ABROAD

There are 2 types of headlamps:

1. Manually adjusted lamps.
2. Adjustment free lamps.

Manual headlamp beam adjustment: The headlamp beam pattern can only be changed by your Dealer/Authorised Repairer.



E135218

Adjustment free headlamps: If the headlamps are marked with the above symbols which are found on top of the headlamp, no mechanical adjustment is required or the need for any external obscuration decals.

These headlamps are fully compliant with current homologation requirements in all ECE countries.

HEADLAMPS - CONDENSATION

In certain circumstances, misting may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This misting is not detrimental to lamp performance and will clear during normal usage.