

If the rotary drive selector is obstructed, remove the obstruction and then start the engine. The selector should elevate.

If the rotary drive selector fails to elevate and there is no obstruction, a fault in the system is indicated. The selector can be used in the lowered position, but be aware that it will not automatically select **P** when the engine is switched off. Therefore **P** should be selected manually. The fault should be rectified by a Dealer/Authorised Repairer at the earliest opportunity.

MANUAL GEAR SELECTION

When the rotary drive selector is in the **D** position (unless set to '**S only**' mode), manual mode may be directly accessed by the single action of operating the steering wheel mounted shift paddles.

If continued use of manual mode is required, the rotary drive selector may be subsequently moved to the **S** position to enter permanent manual mode.

If the rotary drive selector remains in the **D** position, temporary manual mode will be held while the driver is accelerating, decelerating, cornering or continuing to request shifts via the paddles.



When the transmission is set to permanent manual mode (i.e., using the paddles to change gear while in the **S** position and Dynamic mode is selected, see **41, GEAR SHIFT (GREEN)**) transmission upshifts are fully controlled by the driver. This means that the transmission will not change up a gear automatically, even when the vehicle's rev limit is reached. The gear position indicator in the Message centre will glow **amber**, to indicate that the next gear should be selected. The gear shift warning lamp will also illuminate. See **41, GEAR SHIFT (GREEN)**.

ROTARY GEAR SELECTOR

The rotary drive selector elevates out of the centre console when the engine is started, in readiness for gear selection.

P should be selected before switching off the engine. However, it is possible to switch the engine off with **R**, **D**, or **S** selected - the selector will automatically select **P**, while retracting into the centre console.

Note: *If the engine is switched off with **N** selected, the system will wait for 10 minutes before selecting **P**. This procedure is to allow the vehicle to be conveyed through a car wash only and should not be used for vehicle recovery purposes.*

To prevent the transmission from automatically selecting **P** (e.g., for vehicle recovery purposes) it is necessary to activate the Transmission park release, see **204, TRANSMISSION PARK RELEASE**. Vehicle recovery should only be undertaken by qualified personnel.