

1. Insert a small flat-bladed screwdriver into the indent as shown and carefully lever out the side of the lamp unit and remove.
2. Twist the bulb holder 90 degrees anticlockwise to access the bulb.
3. Pull to remove the bulb from the holder.

See **217, BULB SPECIFICATION** for the replacement bulb specification list.

## WIPERS SERVICE POSITION

**Note:** *The Smart key must remain in the vehicle while the wiper blades are replaced.*

Before changing a wiper blade, the wiper arms must be set in the 'service' position as follows:

1. Make sure the ignition is turned off.
2. Turn the ignition on, then off again.
3. Immediately pull the wiper stalk towards the driver (as if to command a single wipe), hold this position while turning on the ignition again.  
The wipers will move to their service position.
4. When the new parts have been fitted, turn the ignition off. This will return the wipers to the park position.

**Note:** *Fit only replacement wiper blades that are identical to the original specification.*

## SUNROOF RESET

If the battery is disconnected, or the power supply is interrupted, while the sunroof is partially open it will need to be reset.

Once the power supply is restored, reset the sunroof as follows:

1. Switch the ignition on.
2. Fully close the sunroof.
3. Press the front of the sunroof switch, and hold for 45 seconds.

4. After 45 seconds the sunroof will begin to move. Keep the front of the switch pressed until the sunroof and the roof blinds have fully opened, then closed.
5. Once the open/close cycle has completed and the sunroof has stopped moving, release the switch.

The sunroof can now be operated as normal.

## WINDOW RESET

The windows will need to be reset if the battery is disconnected, becomes discharged, or the power supply is interrupted.

Once the power supply is restored, reset the windows, as follows:

1. Make sure that the engine is running.
2. Close the window fully, and release the switch.
3. Lift the switch to the close position and hold for 2 seconds.
4. Release the switch.
5. Repeat the lift and release procedure (steps 3 and 4) twice more.
6. Open the window fully.
7. Lift and release the switch to check the One-touch window operation, see **61, ONE-TOUCH WINDOW OPERATION**.
8. Repeat the procedure on each window.

**Note:** *It is advisable to have the engine running while resetting the windows, to make sure that a minimum of 12 volts is available at all times.*

## SIDE WINDOW BLIND RESET

### Rear door electric sun blinds

**Note:** *Make sure that the One-touch window operation is functional, (see **61, ONE-TOUCH WINDOW OPERATION**) and the window is fully closed.*

Reset the sun blind, as follows: