


2. Make sure that Park (P) is selected.
3. Select the **Service menu** using the instrument panel menu control (see **36, INSTRUMENT PANEL MENU**). Select **Oil level display** from the Service menu. The current oil level status and topping-up advice is displayed in the instrument panel, top-up as instructed.

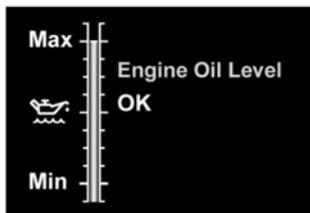

E132659

An indication of the oil level is displayed in the gauge. Messages to the right of the gauge advise you of any action you may need to take.

If the oil level is within the required operating range, the message **Engine Oil Level OK** will be displayed. Do not add any additional oil to the engine.

If the oil level is below the required operating range, a message advising you how much oil to add will be displayed (e.g. **Add 0.5 Litre**). Add the recommended quantity of oil.

If the message **Engine Oil Level Overfilled** is displayed, seek qualified assistance immediately. Do not drive the vehicle as this will cause serious damage to the engine.


If the message **Engine Oil Level Underfilled** is displayed, add 1.5 litres (2.6 pints) of oil, then recheck the level.

If the message **Engine Oil Level Not Available** is displayed, the oil level is stabilising. Switch off the ignition, wait 10 minutes, then recheck the oil level display.

If the warning message **ENGINE OIL LEVEL MONITOR SYSTEM FAULT** is displayed, seek qualified assistance.

2.0 litre petrol engine

Note: If it is necessary to check the oil level when the engine is hot, switch off the engine and let stand for 5 minutes to allow the oil to drain into the sump. Do not start the engine.

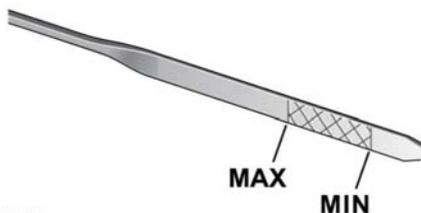

E144247

1. Withdraw the dipstick and wipe the blade clean with a lint free cloth.
2. Fully re-insert the dipstick and withdraw again to check the oil level. Never allow the oil level to fall below the lower mark (MIN) on the dipstick.
As a general guide, if the level on the dipstick:
 - Is nearer to the upper mark or notch than the lower, add no oil.
 - Is nearer to the lower mark than the upper, add 0.5 litre (1 pint) of oil.
 - Is below the lower mark, add 0.8 litre (1.4 pints) of oil and re-check the level after a further 5 minutes.

TOPPING UP THE OIL



Failure to use an oil that meets the required specification could cause excessive engine wear, a build up of sludge and deposits, and increase pollution. It could also lead to engine failure. Do not use low quality or obsolete oils.