

Exiting the vehicle

MISLOCK

If one of the doors, the bonnet or the luggage compartment are not shut fully when the vehicle is locked using the Smart key or by Keyless locking, the vehicle will not lock and 2 warning tones will sound. Check that all doors, the bonnet and the luggage compartment are closed properly and lock the vehicle again.

If one or more of the doors fails to lock properly when a lock attempt is made using the Smart key, 2 warning tones will sound and one or more of the doors may not be locked.

Note: Operating the interior or exterior door handles, while attempting to unlock, lock, or change the child lock status of the vehicle (including Drive-away locking), may cause the security system to ignore any unlock, lock, or child lock requests.

GLOBAL CLOSING



Make sure that no children, pets, or obstructions are in any open aperture before operating Global closing.

Make sure that all of the doors are closed, then press and hold the lock button on the Smart key for 3 seconds. Alternatively, press and hold the lock button on the door handle. The vehicle will single lock and the alarm will be fully armed immediately. After 3 seconds, all of the windows will close.

Note: If the button on the door handle is released before the windows have fully closed, the windows will stop closing.

KEYLESS LOCKING



Remove all Smart keys and emergency key blades from the vehicle when it is left unattended. This will help prevent the alarm being disarmed and therefore help prevent theft.



The Smart key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), game console etc.

The vehicle will not lock automatically.

To Single lock the vehicle, press the button on the door handle once. The hazard warning lamps will flash once as confirmation (in some markets, an audible warning will sound).

To Double lock the vehicle, press the button twice within 3 seconds. The hazard warning lamps will flash twice (with a long second flash). In some markets, a double audible warning will sound.

Note: Keyless locking will only activate if all of the doors, bonnet and the luggage compartment are closed and the Smart key is outside the vehicle. If the above conditions are not met, 2 audible error warnings will sound.

FULL ALARM

To set full alarm protection, make sure that all the windows and the sunroof are closed. On vehicles fitted with Double locking, press the lock button twice within 3 seconds. The hazard warning lights will flash twice to confirm the alarm state and, in some markets, an audible tone will sound.

Note: If the alarm is armed and a window or the sunroof are left open, the alarm may sound due to movement of air currents, detected by the intrusion sensors in the front interior light console.

The intrusion sensors can be temporarily disabled, for the next time the vehicle is locked, via the Vehicle Set-up area of the Instrument panel menu.