


REMOTE SEATS

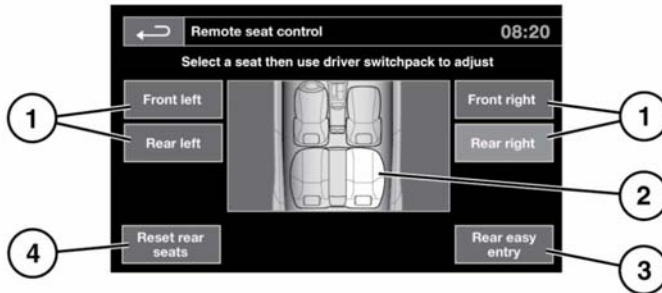


E153590

The front and rear passenger seats can be controlled by the driver. To select the **Remote seat control** menu, touch **Remote seats** on the **Front climate** menu, see **66, FRONT CLIMATE CONTROL**.

1. Touch to select the seat to be adjusted. Once selected, the driver can adjust the seat using his seat adjustment controls on the side of the seat.
2. This highlights the selected seat to be adjusted.
3. **Rear easy entry:** Touch to turn Rear easy entry On/Off. When On is selected, the rear seats will automatically move to the home position when a rear door is opened to allow easier entry and exit.
4. **Reset rear seats:** Touch to enable the memory button 3 on the driver's side to be used to reset the rear seat to the home position. See **14, DRIVING POSITION MEMORY**.

REAR SEAT POSITION MEMORY

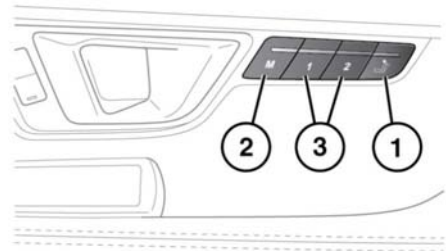

E152976

1. Press and hold the switch to return the rear seat to the home position to allow easier entry and exit.
2. Memory set button.
3. Memory presets.

Once you have adjusted the rear seats (see **16, EXECUTIVE CLASS SEATS**) the vehicle can memorise these settings using the rear seat memory buttons.

1. Press the memory set button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to memorise the current settings.