

# Warning lamps

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.

**Note:** Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.

## FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

If a direction indicator bulb fails, the audible ticking and warning lamp will sound and flash at twice the normal rate, when that direction indicator is selected.

## CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive cruise control is active.