
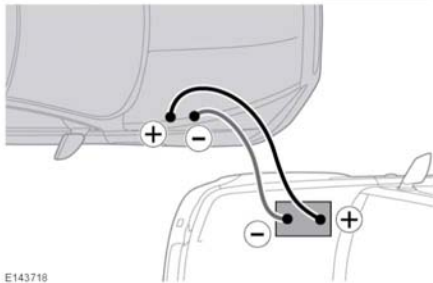
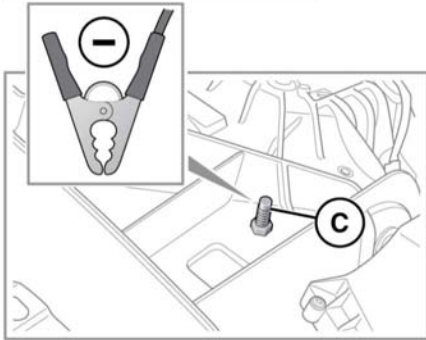


Vehicle battery

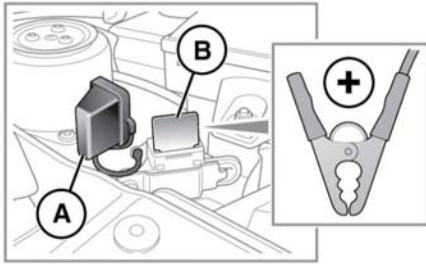

E143718

With the bonnet open and the engine cover removed (see 161, **UNDER BONNET COVERS - REMOVAL**):

1. Connect the positive jump lead (Red) to the positive terminal on the donor vehicle's battery.
2. Remove the positive terminal cover (A) and connect the other end of the positive jump lead to the positive terminal (B).

3. Connect the negative jump lead (Black) to the recommended jump starting earth point of the donor vehicle.
4. Connect the other end of the negative jump lead to the negative post (C).
- ⚠ Check that all cables are clear of any moving components and that all 4 connections are secure.
5. Start the engine of the donor vehicle, and allow it to idle for a few minutes.
6. Start the engine of the disabled vehicle.
If repeated attempts to start the disabled vehicle are needed, allow the donor vehicle to idle for a few minutes between attempts.
7. Allow both vehicles to idle for 2 minutes.
8. Switch off the donor vehicle.

DISCONNECTING JUMP LEADS



To avoid serious injury use extreme caution when removing the jump leads as the engine will be running on the previously disabled vehicle. This means that you may be working close to components which are moving at high speed, carry high voltage, or may be hot.

Note: Do not switch on any electrical equipment until after the cables have been disconnected.

The engine should be running on the previously disabled vehicle and the engine switched off on the donor vehicle. Disconnect the jump leads in the exact reverse order of that used for connection.

CONNECTING A STARTING AID



Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.