

Heating and ventilation

Note: If the climate control system is switched off, pressing an **AUTO** button or the **Defrost** button, will switch the climate system on.

Note: Water expelled by the air conditioning may collect underneath the vehicle when parked. This is not a cause for concern.

AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the climate control system will monitor exterior air pollution and humidity and select recirculation if either reaches a predetermined level. This feature only operates when the climate control system is in **AUTO** mode. The sensitivity of the air quality sensor can be set via the Touch screen. See **68**, **AIR QUALITY SENSOR**.

Pressing the recirculation button will deactivate automatic recirculation.

AIR QUALITY SENSOR

The sensitivity of the Air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the buttons on the screen to increase/decrease sensitivity.
To switch off air quality sensing, touch **Off**.



The auto recirculation icon appears on the Touch screen when the Air quality sensor is switched on.

HEATED SEATS

Note: The seat heaters will only operate when the engine is running.

The heated seats are controlled through the Touch screen.

To access the heating controls for front seats:

- Press the seat menu button on the fascia.

- Or, select the seat icon on the touch screen navigation bar.
- Or, from the **Climate** menu, select **Front seats**.

To access the heating controls for rear seats from the front touch screen:

- From the **Climate** menu, select **Rear climate**, then select **Rear seats**.
- **To adjust the seat temperature:**
 - Touch the upper (red) or the lower (blue) arrow for the relevant seat repeatedly, to select 1 of 3 temperature settings (as indicated by the bars adjacent to the arrows).
 - If no bars are illuminated, the seat heaters are switched off.

CLIMATE SEATS

Note: The climate seats will only operate when the engine is running.

Seat heating and ventilation is controlled from the **Home** or **Climate** menus on the touch screen or by the seat menu button.

Heated ventilation:

- Touch the red arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the blue arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the blue arrow a third time to switch off seat ventilation.

Cooled ventilation:

- Touch the blue arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the red arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off seat ventilation.

To select the seatback ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or seatback only ventilation.