

Vehicle recovery

- Push the locking latch **(10)** outwards and return the operating lever (9) to the horizontal position.
- Rotate the locking device **(8)** 90° clockwise.

Reverse steps 1 to 6, and re-install the engine cover.

TRANSPORTING THE VEHICLE



Only use the lashing points, or over-wheel lashings or wheel chocks. Lashing over the body or suspension is not permissible as settling of the air suspension will cause lashing straps to slacken.

The recommended method for recovery/transportation of the vehicle, is on a transporter or trailer designed for that purpose.

Make sure that transportation is carried out by suitably qualified persons, and that the vehicle is secured correctly.