


SEAT MESSAGE

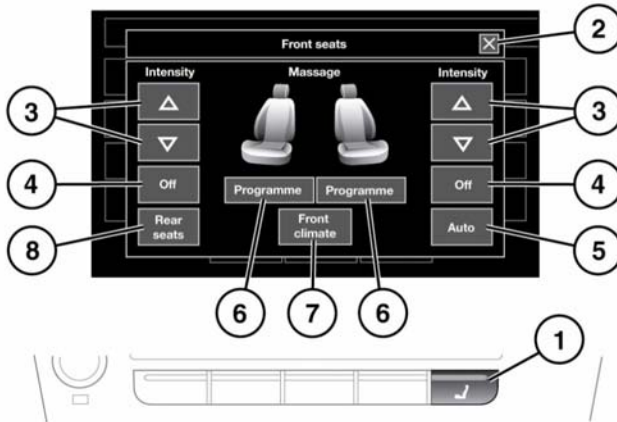

E153572

Note: Seat massage will only operate when the engine is running.

Seat massage may not operate when the vehicle interior temperature is below 0°C (32°F) or above 50°C (122°F).

Seat massage is controlled through the Touch screen:

1. Press to display the **Front seats** menu, then touch the **Message** soft key.

Or: From the **Front climate** menu (see 66, **FRONT CLIMATE CONTROL**) touch **Front seats** to select the **Front seats** menu. Then touch the **Message** soft key.

Note: If accessed via the hard button (1) the pop-up screens will time-out after 30 seconds.

2. Press to exit seat massage.
3. Touch to vary the intensity of the selected programme.
4. **Off:** Touch to end the programme.

5. **Auto:** Touch to display a menu which allows the driver's seat massage to be switched On/Off. Also a time delay can be set from the start of a journey.

6. **Programme:** Touch to display the various seat massage programmes.

7. **Front climate:** Touch to select the **Front climate** menu.

8. **Rear seats:** Touch to select the **Rear seat climate** menu then touch **Message** to select the rear massage controls menu.

Note: Rear seat passengers control rear seat massage via the switches on the rear seat switch pack, see 18, **REAR SEAT MASSAGE**.

Note: After 10 minutes, Seat massage will stop automatically.