

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

FOLLOW MODE (AMBER)



Illuminates when the Adaptive cruise control system is in follow mode.

AIRBAG (AMBER)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when Automatic Speed Limiter is active.

EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

INTELLIGENT STOP/START OFF (AMBER)



Illuminates when the Intelligent stop/start system is switched off.

TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

GEAR SHIFT (GREEN)



The Gear shift indicator illuminates briefly at the recommended gear change point (upshift), while in Manual gear selection mode only.

The Gear shift indicator will not illuminate while Cruise control is active, unless Cruise control is over-ridden by pressing the throttle pedal.

Note: *This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.*

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

HIGH BEAM ASSIST (GREEN)



Illuminates when the High beam assist feature has switched on the high beams.