


Heating and ventilation

FRONT CLIMATE CONTROL

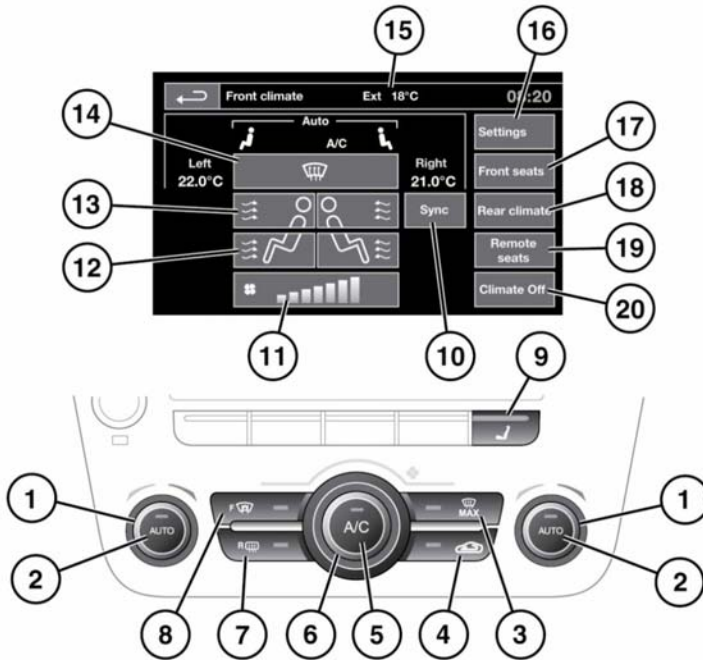

E153406

To access the front climate menu on the Touch screen, select **Climate** from the **Home menu**.

1. **Temperature control**: Rotate to adjust temperature (16°C - 28°C [59°F - 83°F]). The temperature is displayed on the Touch screen. On the driver's side only, HI (high) or LO (low) can be selected.
2. **AUTO control**: Press to switch automatic operation on.

Note: *AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.*

3. **Defrost**: Press to activate the blowers, air-conditioning, front and rear screen heaters and prohibit recirculation.
4. **Recirculation**: Select to recirculate air inside the vehicle. Press briefly to select **timed** recirculation. Recirculation will switch off automatically after a set time (dependent on the ambient temperature). Press and hold to select **latched** recirculation. Recirculation will remain on until the button is pressed again.

Note: *Prolonged use at low temperatures may cause the windows to mist.*

5. Air conditioning: Press to switch on/off. The air conditioning system can be switched on/off independently of the other climate control functions.

6. Blower speed: Rotate to adjust the blower speed.

Blower speed is automatically set in Auto mode. Adjusting the blower speed will cancel Auto mode.

With the blower speed at minimum, rotate the control counter-clockwise to switch the climate system off.

7. Rear screen heater: Press to switch on/off. If left on, it will deactivate after 21 minutes.

8. Front screen heater: Press to switch on/off. If left on, it will deactivate after 5 minutes.

Note: In cold ambient conditions, the front and rear screen heaters will switch on automatically when the engine is started. The screen heaters will also activate automatically at temperatures below 5°C (41°F). This function can be turned on/off via the **Settings menu**.

9. Press to access the front seat heating, ventilation and massage controls on the Touch screen.

10. **Sync:** Select to change all the front and rear passenger climate settings to match that of the driver.

11. Blower speed indicator.

12. Air distribution to the feet: Touch to turn on/off.

13. Air distribution to the face: Touch to turn on/off.

14. Air distribution to the front windscreen: Touch to turn on/off.

15. External temperature display.

Note: When the external temperature is low enough that ice may be present on the road, an amber snowflake warning lamp will illuminate in the Instrument panel. See **41, EXTERNAL TEMPERATURE (AMBER)**.

16. **Settings:** Select to view the **Settings menu**, from this menu the automatic deployment of the front and rear heated screen function can be turn on/off. Also the sensitivity of the air quality sensor can be adjusted, see **68, AIR QUALITY SENSOR**.

17. **Front seats:** Touch to select the **Front seat** menu to control the following:

- Front Heated or Climate seats, see **68, HEATED SEATS** or **68, CLIMATE SEATS**.

- To select the **Front massage** menu, see **70, SEAT MASSAGE**.

- To switch Massage on/off. It turns on at the last known setting.

To adjust the setting, touch the **Massage** soft key.

- To select **Rear seats** menu.

- To select **Remote seats** menu, see **17, REMOTE SEATS**.

18. **Rear climate:** Select to view the **Rear climate** menu. Select the Back button to return to the front climate menu. See **71, REAR CLIMATE CONTROL**.

19. **Remote seats:** Select to view the **Remote seat control** menu. See **16, EXECUTIVE CLASS SEATS**.

20. **Climate Off:** Select to turn the climate control system on/off.

In addition to the selectable controls, the climate menu displays symbols that indicate the status of heating and ventilation functions.

Note: Some functions are not available on all vehicles.