

Parking aids

When parking aid is active a pop-up appears on the Touch screen showing a plan view of the vehicle and the immediate surrounding area. Touch the screen to cancel the view.

Note: If a rear camera is fitted, when reverse gear is selected, the camera display is selected automatically. To view the parking aid display, touch the screen.

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

Note: The front parking aid provides an audible proximity warning when driving forwards and when reversing.

Note: The sensors should be kept clean to maintain accuracy and performance. See **165, SENSORS AND CAMERAS**.

PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/ Authorised Repairer as soon as possible.

PARKING AID VOLUME


To set the volume of the parking aid warning tones:

- Select **Setup** from the touch screen Home menu, then select **System**.
- Select **Volume presets**, then use the **+** or **-** soft keys alongside Parking aid to adjust volume for both front and rear warning tones.

REAR CAMERA




It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.

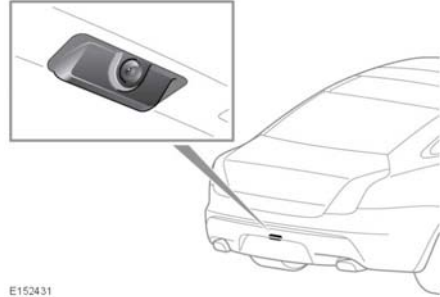

E152431


The Rear camera provides a rear-view image, to assist in reversing the vehicle. When Reverse (R) is selected, the screen automatically displays a wide angle, colour image from the rear of your vehicle. Overlaid on the image are reversing guidelines.

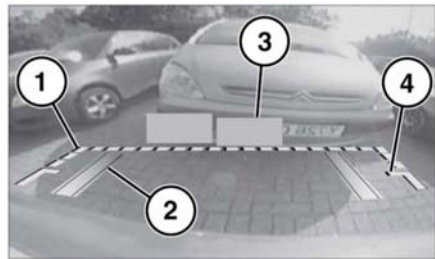

E165166

1. Dotted guidance line: The safe working width of the vehicle (including exterior mirrors).
2. Solid guidance line: The projected path based on current steering wheel position.

3. Park Distance Control (PDC) graphics: A coloured area appears, to indicate which rear sensor(s) has been activated.
4. Rear access guidance line: Do not reverse beyond this point if rear access is required.

 Some overhanging objects or barriers which could cause damage to the vehicle may not be detected by the camera.

Note: *The camera display has priority over the parking aid display. To view the parking aid display instead, touch the display.*

Note: *A return icon is displayed on the Touch screen. Touch this to revert to the previously viewed screen.*

Rear camera display on the Touch screen will discontinue when either of the following apply:

- Drive (D) is selected for longer than 15 seconds.
- Drive (D) is selected and/or vehicle speed is greater than 18 km/h (11 mph).