

Entering the vehicle

KEYLESS ENTRY



Any person fitted with an implanted medical device should make sure that the device is kept at a distance of at least 22 cm (8.7 inches) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and device.

For information concerning the locations of the security system transmitters, see 219, SMART KEY TRANSMITTER LOCATIONS.



If a Smart key is lost, a replacement can be obtained and reprogrammed to the vehicle by a Dealer/Authorised Repairer. Notify a Dealer/Authorised Repairer as soon as a Smart key is lost or stolen and have the remaining Smart key(s) reprogrammed.

Keyless entry allows the vehicle to be unlocked and disarmed by simply operating the door handle, provided the Smart key is within 1 metre (3 feet).

The Smart key needs only to be on the driver's person; it does not need to be exposed or handled. However, the Smart key may not be detected if it is placed within a metal container or is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), game console etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.

Note: *Keyless entry will unlock the vehicle in accordance with the current security setting (Single-point or Multi-point entry). However, if Single-point entry is the current setting and a door other than the driver's door is opened first, all doors will unlock.*

When all open doors have been closed, the system will search the vehicle interior for a valid Smart key. If one is not detected, **SMART KEY NOT FOUND, PLACE AS SHOWN** will be displayed in the message centre. Find the Smart key and place it against the fascia, below the auxiliary switch pack, see **80, KEYLESS START BACKUP**.

The security system fitted to your vehicle is Thatcham category 1 approved, and meets EU regulations 97/116 and EU directive 95/56 EC.

GLOBAL OPENING

Press and hold the unlock button for 3 seconds. The vehicle will unlock and the alarm will be disarmed immediately. After 3 seconds, all of the windows will open. This feature can be enabled/disabled via the Instrument panel menu.

To stop the windows from opening/closing during the Global opening/closing operation, press any of the buttons on the Smart key or operate the driver's window switch. To stop a particular window from opening, operate the relevant window switch.

Note: *Global opening is disabled on a window if the electric sun blind is in the up position.*

For Global closing, see **10, GLOBAL CLOSING**.

DRIVE-AWAY LOCKING

Locks all of the doors when the vehicle exceeds 8 km/h (5 mph). Use of the central locking/unlocking buttons (see **248, DRIVER CONTROLS**) will override the Drive-away locking feature for the rest of a journey.

If a door is individually unlocked and opened, all of the doors will relock when the open door is subsequently closed.

Note: *Drive-away locking can be enabled/disabled via the Vehicle Set-up area of the instrument panel menu.*