

INTELLIGENT STOP/START

The Intelligent stop/start system is designed to improve fuel efficiency and is automatically activated when the ignition is turned on. If the vehicle is stopped (e.g., at traffic lights or in traffic) the engine will turn off (unless it is required to support other vehicle systems). When the brake is released and a drive gear is selected, the engine will restart automatically.

During operation of the Intelligent stop/start system a warning lamp will illuminate, see **42, INTELLIGENT STOP/START (GREEN)**.

To activate an automatic engine stop:

- Stop the vehicle from a speed greater than 4 km/h (2.5 mph) and apply sufficient brake pressure to make sure the vehicle is stationary.

To activate an automatic engine restart, release the brake pedal with Drive (**D**) or Sport (**S**) selected.

The engine will also restart if one of the following occurs:

- Intelligent stop/start is deactivated.
- The accelerator pedal is pressed.
- A shift paddle is used to select a gear.
- Reverse (**R**) is selected.
- Climate control system demand increases.
- The vehicle's speed exceeds approximately 1 km/h (0.5 mph).
- Battery charge becomes low.
- Brake vacuum has been reduced (e.g., using the brake pedal repeatedly with the engine off).
- If the steering wheel is turned.

The following conditions will prevent an automatic engine stop:

- A shift paddle has been used to select a gear.

- The external temperature is less than approximately 0°C (32°F).
- The external temperature is more than approximately 40°C (104°F).
- The engine has not reached operating temperature.
- The driver's seat belt is not fastened.
- The Climate control system demand requires the engine to be running (for example, in Defrost mode).
- The battery charge is low.
- The bonnet is opened.
- Intelligent stop/start is deactivated.

To prevent the vehicle from being inadvertently left in a driveable condition, the ignition will automatically turn off if the following occurs while transmission **D** or **S** is selected:

- The driver's seat belt is unfastened and then the brake pedal is released.

The ignition will also turn off if transmission **N** or **P** is selected and the driver's seatbelt is then unfastened.

The vehicle must be restarted as normal.

DEACTIVATING INTELLIGENT STOP/START

To switch the system off, press the **ECO** switch on the fascia. See **248, DRIVER CONTROLS**.

Note: The engine will restart automatically if the switch is pressed while an automatic engine stop is in progress.

To confirm that the system is off, the Intelligent stop/start system off warning symbol illuminates (see **41, INTELLIGENT STOP/START OFF (AMBER)**) and the message **ECO Stop/Start Off** is momentarily displayed.

Note: The Intelligent stop/start system will automatically reactivate the next time the ignition is turned on.

Intelligent stop/start

The Intelligent stop/start system off warning symbol also illuminates if there is a system fault. If the **ECO** switch is pressed while there is a fault, the message **ECO Start Stop Unavailable** is displayed.