


Access to a rear fog lamp housing is from beneath and behind the rear bumper. The bulb holder is a black plastic unit that incorporates the bulb. No tools are required but a torch may be of use.

1. To remove the bulb holder, press in the outer wings on the black plastic unit and pull the holder free of the housing.
2. To separate the bulb holder from the electrical connector, first push up the connector lock.
3. Push in the release mechanism while pulling the connector and bulb holder apart.

**Note:** Inside the bulb holder are 3 locating lugs. When fitting the new bulb unit, the lugs must mate up to the connector correctly.

Refitting is a reverse of the removal process. Make sure the connector lock is pressed down and that the bulb unit locates securely into the fog lamp housing.

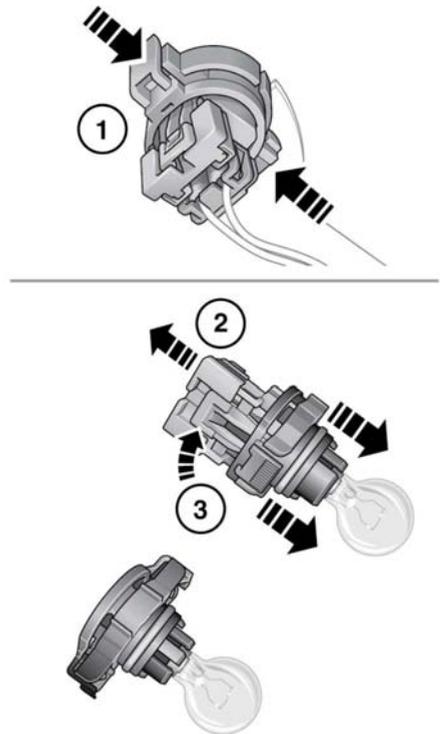

E150362

## WIPERS SERVICE POSITION

To avoid damage to the bonnet, do not lift the wiper blades when they are in the normal parked position.

Before changing a front wiper blade, the wiper arms must be set in the Winter Park position, see **59, WINTER PARK POSITION**.

**Note:** The Smart key must remain in the vehicle while the wiper blades are being renewed.

1. Make sure that the ignition is turned off.
2. Turn the ignition on and then off again.
3. Immediately push the wiper control down to start the single wipe operation and turn the ignition on again.