

The timed climate control system may be operated by either the Touch screen or the remote handset.

The system may not operate or will switch off automatically in the following scenarios:


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## SETTING TIMED CLIMATE

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the climate control **AUTO** button will flash.

**Note:** *The system will cease operation if the engine is started*

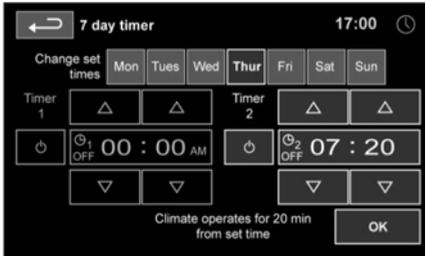

E140084

To set a timed climate programme:


1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select the day for which you want to set a programme or select **All Week** to select the same start time for every day.

3. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer using the same process.

**Note:** *The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. See **73, SYSTEM SETTINGS**.*

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant power soft key on the timer set up menu or the **Power** soft key on the **Timed Climate** information home menu.

## USING THE TIMED CLIMATE REMOTE

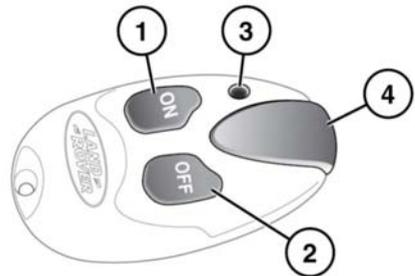

E155970

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** *Avoid touching the antenna when operating the **ON** or **OFF** buttons.*