

## CHANGING THE CONNECTED PHONE

Up to 10 mobile phones can be paired with the vehicle in the same way. However, only one can be connected and ready for use as a phone at any one time.

To connect a different paired phone to the vehicle, follow the steps below:

1. From the **Home** menu, select **Phone**.
2. A menu will appear. Select **Change phone**.
3. Identify and select your phone from the displayed list.
4. Once your phone is connected to the system, a confirmation message will be displayed before switching to the Digit dialling screen.

## TELEPHONE SYSTEM ICONS



**Connect:** Use to send or accept a call and access last 10 calls list.



**Disconnect:** Use to end or reject a call.



**No phone connected.**



**Phone signal strength indicator.**



**Phone battery level indicator.**



**Bluetooth:** Indicates that a **Bluetooth®** wireless technology device is connected.



**Tick:** Indicates that a **Bluetooth** wireless technology device is paired.



**Voicemail:** Press and hold to dial the stored voicemail number.




**Scroll bar up arrow:** Use to scroll up lists of detected phones, calls or phonebook entries.



**Scroll bar down arrow:** Use to scroll down lists of detected phones, calls or phonebook entries.

## STEERING WHEEL CONTROLS

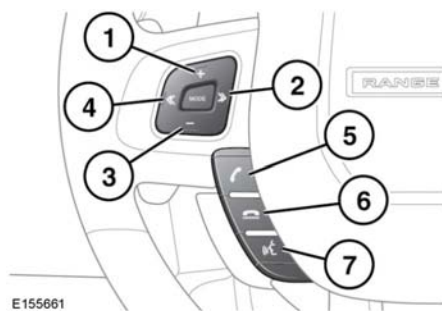

1. Increase the volume when in a call, scroll up a displayed list or number listed for a stored contact.
2. Press to scroll to the last 10 list and received calls.
3. Decrease the volume when in a call or scroll down a displayed list or a number listed for a stored contact.
4. Press to scroll back through received calls, the last 10 list and finally to exit the list.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the last 10 dialled list. Press and hold to access the phonebook list view.
6. Press to end or reject a call.
7. Press to activate voice control.

**Note:** When scrolling through a phonebook or the last 10 list, each contact is also displayed in the Message centre.