



## HEADLAMP REMOVAL

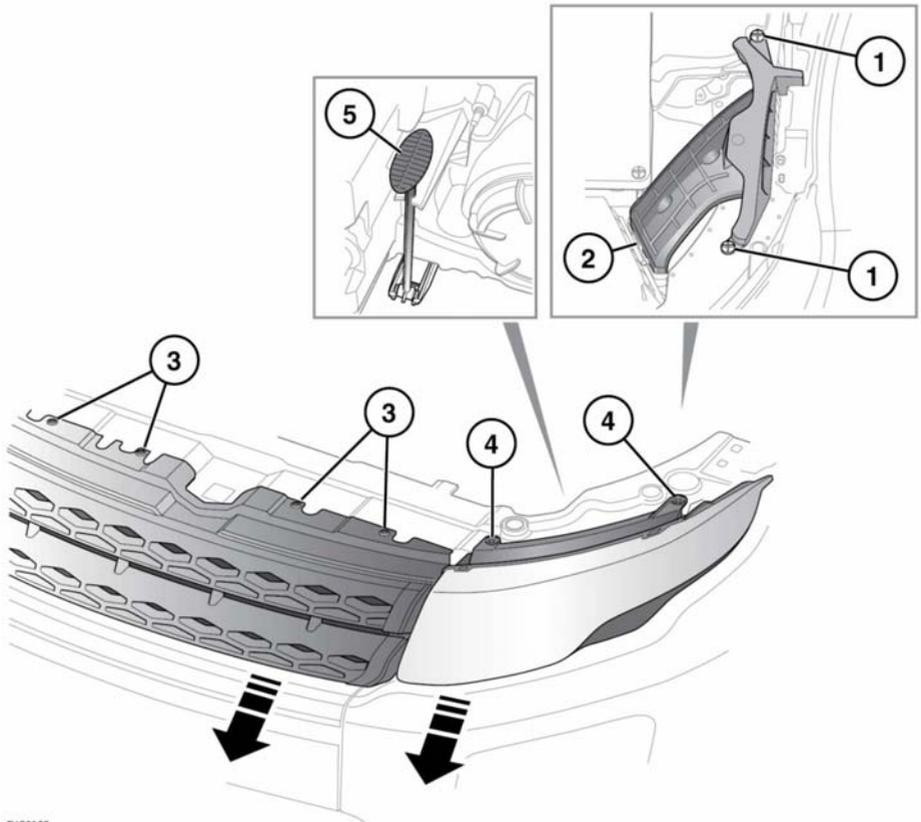

E150355

### Moving the left side headlamp unit to access the bulbs:

1. Remove the 2 plastic fixings.
2. Pull the tube up to release from the air box. This will allow more room for manoeuvrability.
3. Remove the 4 grille fixings.
4. Remove the 2 retaining bolts.
5. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40 mm (1.6 in).

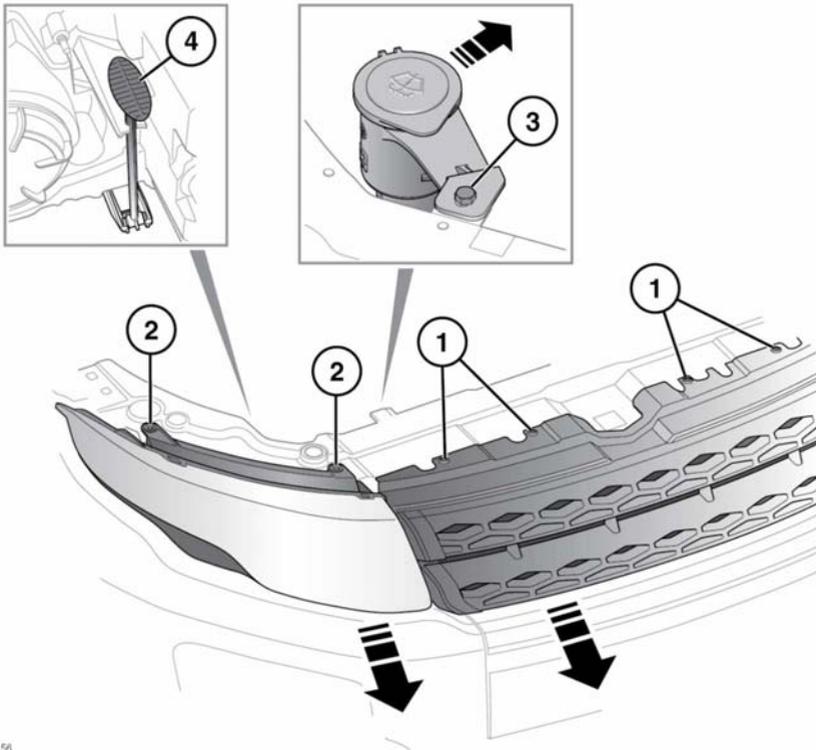

E150356

## Moving the right side headlamp unit to access the bulbs:

1. Remove the 4 grille fixings.
2. Remove the 2 retaining bolts.
3. Remove the fixing and then move the filler tube rearwards. This will allow more room for access to the bulb holders.
4. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40 mm (1.6 in).