


## INTERIOR LIGHTS

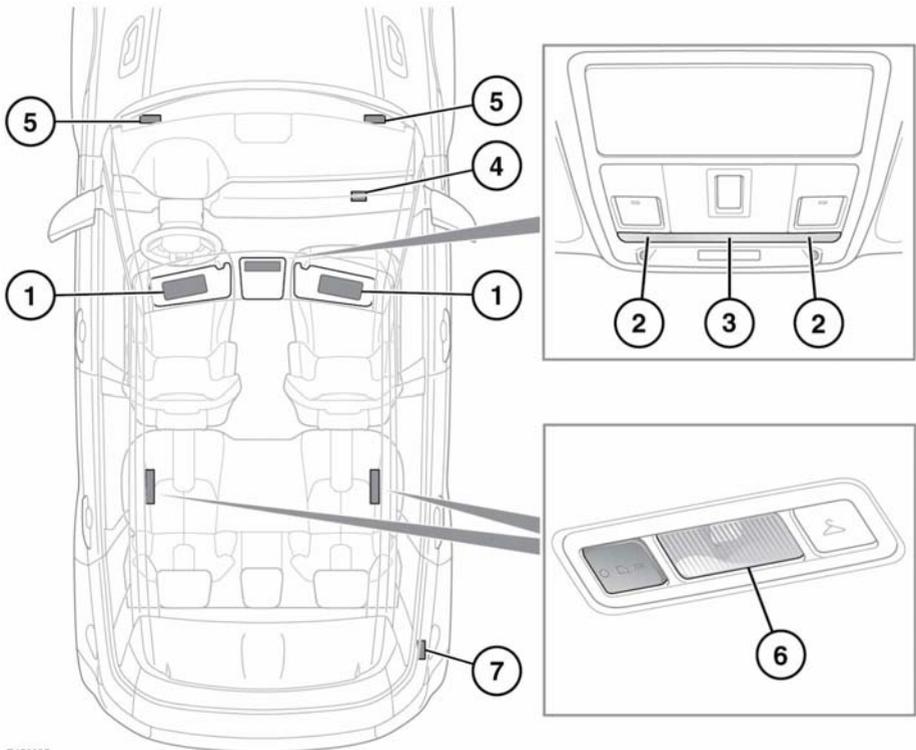

E 153605

- 1. Sun visor lamps:** Illuminate when the vanity mirror is opened.
- 2. Map reading lamps:** Move a finger close to (or touch) the relevant lens to switch on/off.  
**Note:** If you are wearing gloves, it may be necessary to touch the lens to operate the lamps.
- 3. Front interior lamp:** Illuminates when the doors are unlocked and extinguishes 60 seconds after all doors are closed, when the engine starts or when the vehicle is locked. Move a finger close to (or touch) the lens to switch on and off manually. Touch the lens for 2 seconds to deactivate/activate automatic illumination.
- 4. Glove box lamp:** Illuminates when the glove box is opened.
- 5. Footwell lamps:** Illuminate when the doors are unlocked and extinguish 60 seconds after all doors are closed, when the engine starts or when the vehicle is locked.