

3. Read the tyre pressure from the gauge and add air if required.
4. If air is added to the tyre, remove the gauge and re-attach it before reading the pressure. Failure to do so may result in an inaccurate reading.
5. If the tyre pressure is too high, remove the gauge and allow air out of the tyre by pressing the centre of the valve. Refit the gauge to the valve and check the pressure.
6. Repeat the process, adding or removing air as required, until the correct tyre pressure is reached.
7. Refit the valve cap.

## TYRE VALVES

Keep the valve caps screwed down firmly to prevent water or dirt entering the valve. Check the valves for leaks when checking the tyre pressures. For TPMS tyre valves, see **245, TYRE PRESSURE MONITORING SYSTEM**.

## REPLACEMENT TYRES



**Always fit replacement tyres of the same type, and wherever possible, of the same make and tread pattern.**



**The load and speed index ratings on all replacement tyres must be, at least, the same specification as the vehicle's Original Equipment (OE). If in doubt, consult a Dealer/Authorised Repairer.**



**If lower speed rated specialist tyres are fitted (e.g., winter tyres or off-road tyres), then the vehicle must be driven within the speed limitations of the tyres. Consult your Land Rover dealer for further information. In markets that require a tyres maximum speed label to be fitted, the tyre's maximum speed label should be placed within the driver's field of vision. These can be obtained from the tyre dealer.**



**Do not rotate the tyres around the vehicle.**



**If the use of tyres not recommended by Land Rover is unavoidable, make sure you read, and fully comply with, the tyre manufacturer's instructions.**



Tyre removal and fitting should be carried out by a Dealer/Authorised Repairer.



When removing a tyre from a wheel or fitting a tyre to a wheel, make sure the TPMS sensor is not damaged.

When the tread has worn down to approximately 2 mm, wear indicators start to appear at the surface of the tread pattern. This produces a continuous band of rubber across the tread, as a visual reminder.

Tyres should be renewed in sets of 4. If this is not possible, renew the tyres in pairs (both front or both rear). When tyres are renewed, the wheels should always be re-balanced and the alignment checked.

For the correct tyre specification and pressures, see **240, TYRE PRESSURES**. Alternatively contact a Retailer/Authorised Repairer for advice.