


TOUCH SCREEN HOME MENU

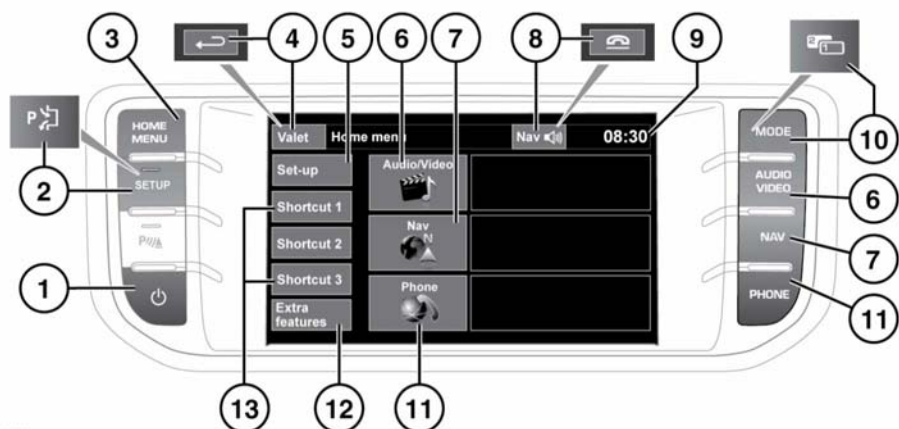

E153231

⚠ Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.

ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery, preventing the engine from starting.

ⓘ Avoid spilling or splashing liquids onto the Touch screen.

1. Press to turn the Touch screen on/off.
2. Press to select the Touch screen **Setup** menu. When Park assist is fitted, this icon is changed and the button should be pressed to activate Park assist.
3. Press to select the **Home** menu.
4. Touch to select the **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed
5. Touch to select the Touch screen **Setup** menu.

6. Touch or press to select the **Audio/Video** menu. See **132, AUDIO/VIDEO CONTROLS**.
7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
8. While the navigation system is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
9. Touch to adjust the time/date.
10. Press to select the **Mode** menu. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
11. Touch or press to select the **Phone** menu.
12. Touch to select the **Extra features** menu.
13. Touch to change the shortcuts. See **73, TOUCH SCREEN SETUP**.

TOUCH SCREEN USE

ⓘ Do not use excessive pressure when selecting items on the Touch screen.