

**Note:** The driver's door must be opened and closed after the trailer/caravan is connected to the electrical socket before the system will detect the connection.

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** If the connection is not detected, setup can be manually prompted by touching the *Tow Assist* soft key on the **Camera** menu. See **114, SURROUND CAMERA SYSTEM**.

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information such as trailer hitch length, number of axles and camera preference is required to finalise setup. Once completed, the details are stored for future use.

When a new or existing trailer configuration is selected, *Tow assist* automatically displays on the Touch screen when reverse gear is selected. Coloured lines are displayed to indicate the predicted path of both trailer and vehicle.

## **FITTING THE DETACHABLE TOW BALL**

Fit and remove instructions are supplied with this accessory fit item. Make sure they are kept in a safe place.