


## STANDARD RADIO CONTROLS

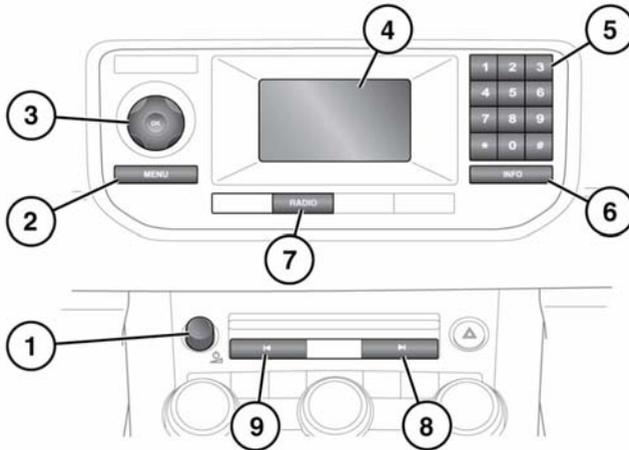

E150341

**!** Sustained exposure to high sound levels can damage your hearing.

1. Press to switch on/off.

**Note:** The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.

Rotate to adjust volume level.

**Note:** The maximum volume level will be restricted if the audio unit is used with the engine switched off.

2. **MENU** button:

- Audio settings.
- Clock settings.
- Language.

3. **OK** and navigation menu control:

Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.

4. Audio Information display.

5. Keypad.

6. **INFO:** Traffic/News information.

7. **RADIO:** Waveband select (FM, FMAST, AM, AMAST).  
When DAB is fitted, select for DAB1 or DAB2.

8. Seek up:

- Short press to select the next radio station upward in frequency.
- Long press to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.

9. Seek down:

- Short press to select the next radio station downward in frequency.
- Long press to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.