


## DAB RADIO CONTROLS

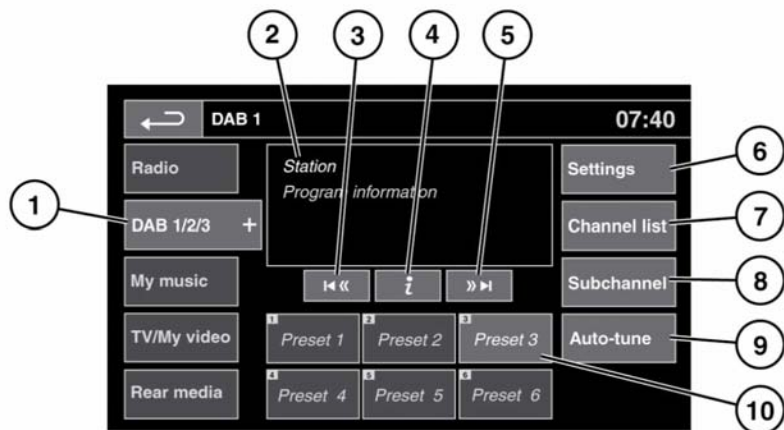

E151973

**⚠ In the interest of safety, only operate or adjust the system when it is safe to do so.**

**⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

- 1. DAB 1/2/3:** Touch to view and select a DAB band (**DAB 1**, **2** or **3**). The radio will tune to the last used channel on that band. Touch again to close.
- Display showing the current channel, the associated Ensemble and relevant DAB radio text.
- Seek down:
  - Short touch to seek a previous available channel.
  - Long touch to seek the previous available ensemble. The first channel in the new ensemble will be selected.
- Channel information: Touch to view DAB text and channel information.
- Seek up:

- Short touch to find the next available channel.
- Long touch to find the next available ensemble. The first channel in the new ensemble will be selected.

- 6. Settings:** Touch to view the DAB Settings menu:
  - Options:** To activate/deactivate FM Traffic and Link DAB and to alter DAB country and format settings (with vehicle stationary).
  - Announcements:** Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.
- 7. Channel list:** Touch to view a list of available ensembles and channels. The list can be sorted by **Ensemble**, **Channel**, **Subchannel** or by **Category**.