

**Note:** If fitted, the rear heated seats (non-climate) can only be operated using the switches located on the rear of the centre console.

Press the relevant front or rear heated seat button to switch the required seat heater on at the maximum setting; the 3 LED indicators on the button will illuminate.

Press a second time to set the heated seat at the medium setting; 2 LED indicators will illuminate.

Press a third time to set the heated seat at the lowest setting; 1 LED indicator will illuminate.

Press a fourth time to switch off.

## CLIMATE SEATS

**Note:** The Climate seats will only operate when the engine is running.

Press the relevant front climate seat button to enable. A pop up menu will appear in the Touch screen.

### Heated ventilation

- Touch the up arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow a third time to switch off the seat ventilation.

### Cooled ventilation

- Touch the down arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off seat ventilation.

## Seat zone selection

Constant selection of the **Seat zone** soft key will scroll through 3 choices of seat zone; full seat, cushion, or seatback only.

## AUXILIARY HEATER

Your vehicle may be fitted with an auxiliary heater which is powered by fuel drawn from the vehicle's fuel tank. The heater only operates at low ambient temperatures while the engine is running. The auxiliary heater helps to boost the temperature of the engine's coolant for improved heater performance. It can also be controlled by the Timed climate control system (if fitted).

When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.



**Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust causing a fire/explosion.**



**Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.**

## TIMED CLIMATE CONTROL

The timed climate control system provides a comfortable temperature inside the cabin in advance of driver and passengers entering. Dependent on the external temperature, the system draws in fresh air to cool the cabin or operates the auxiliary heater to warm it.

The Auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.