




- Park assist must not be used if:
- A temporary spare wheel is in use.
  - A sensor is damaged or the bumper is damaged sufficiently to affect a sensor mounting point.
  - A sensor is obstructed by items attached to the vehicle, e.g., bumper covers, a bicycle rack, a trailer, stickers, etc.
  - The vehicle is being used to transport a load that extends beyond the vehicle perimeter, for example a trailer.

**Note:** All of the doors and the tailgate must be securely closed when using Park assist.

**Note:** During any Park assist manoeuvre, the Parking aid system will remain active and will sound when objects are detected near the vehicle.

## SELECTING PARK ASSIST

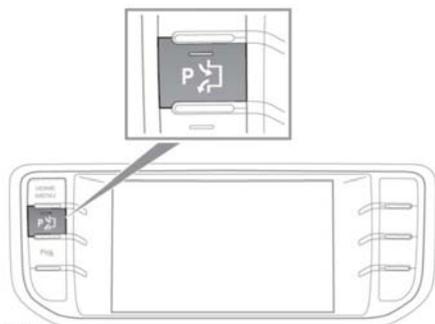

E153239

A short press of the Park assist button will turn the system on. When Park assist is switched on, the button LED will illuminate.

The Park assist button can be used to scroll through the 3 Park assist features:

1. A first press of the button turns the system on and selects **Parallel parking**.
2. A second press of the button selects **Perpendicular parking**.
3. A third press of the button selects **Parking exit**.
4. A fourth press of the button turns the system off and will extinguish the LED.

The selected feature's name is displayed in the Instrument panel's Message centre. Follow the instructions and alerts shown in the Message centre to complete the required manoeuvre.

## USING PARK ASSIST

For assistance when parking, select Parallel or Perpendicular park.

As the vehicle is driven forwards, the size of a potential parking space is assessed.

**Note:** For Park assist to search effectively, maintain a distance of 0.5 m to 1.5 m (1.6 ft to 4.9 ft) between the vehicle and the row of parked vehicles/obstacles between which you wish to park.

**Note:** When first activated, Park assist searches for a space on the passenger side of the vehicle. To search for a space on the driver's side, signal a turn in that direction (using the direction indicator).

**Note:** The Park assist auto searching feature becomes active when the vehicle speed is less than 30 km/h (18 mph). When Park assist is activated, a previous space may already have been located. To obtain a previous space on the other side, signal a turn in that direction.

When a suitable space is found, a short confirmation tone is given and a message is displayed in the Message centre.