


RADIO CONTROLS

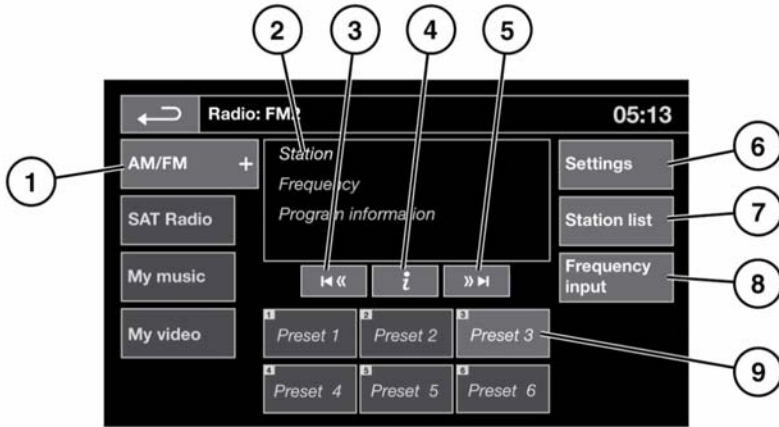

E151293

⚠ WARNING

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing injury or death.

⚠ WARNING

Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. **Radio:** Touch **Radio** to display the **AM/FM** waveband selection soft key. Touch **AM/FM** to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.
2. Displays information about the current station.
3. Seek down:
 - Short touch to auto-seek down the frequency to the previous radio station.

- Long touch to activate manual-seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
4. **Information:** Touch to view more information from the broadcasting station.
 5. **Seek up:**
 - Short touch to auto-seek up the frequency to the next radio station.
 - Long touch to activate manual-seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
 6. **Settings:** Touch to view and activate/deactivate the following features: **RBDS** and **HD Radio**. See **113, RADIO BROADCAST DATA SYSTEM (RBDS)**.