

LOCKING AND ARMING THE ALARM

⚠ WARNING

Before exiting the vehicle, always make sure that the gear selector is in the Park (P) position, the engine is turned off, the Parking brake is applied and the Smart key is removed from the vehicle.

NOTICE

Remove all Smart keys and emergency key blades from the vehicle when it is left unattended. This will help to prevent the alarm from being disarmed and; therefore, help to prevent theft.

Note: Before locking the vehicle, make sure that the hood, Luggage compartment and both doors are fully closed.

Note: The hazard warning lamps will flash once to confirm that the vehicle is locked. The handle of both doors will retract to the flush position. The Perimeter alarm will be activated, see **16, PERIMETER ALARM**.

Smart key locking:

- Press the lock button to lock the vehicle.

Passive locking:

Note: Make sure the Smart key is within 3 ft (1 m) of the door handle.

NOTICE


The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen such as a smart phone, laptop (including when inside a laptop bag), game console, etc.

- Press the rear of the deployed door handle to lock the vehicle.

DOOR LOCKS AND RELEASE LEVERS

⚠ WARNING

Park (P) should be selected and the Electric Parking Brake (EPB) applied when the vehicle is stationary. The vehicle can move unexpectedly with any other gear position selected, which may result in death or serious injury.

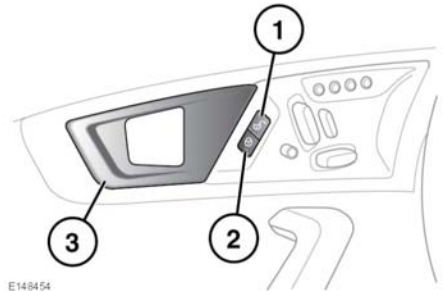

1. Press the unlock button to unlock the vehicle.

Note: The handles will automatically deploy on both doors.

2. Press the lock button to lock the vehicle.

Note: The handles will automatically retract to the flush position on both doors.

3. Pull the release lever to unlock/open the doors.

Note: If the car was locked from outside of the vehicle using the Smart key, then operating the release lever will only release that door and the alarm will sound.

MISLOCK

Note: Operating the interior or exterior door handles while attempting to unlock or lock the vehicle (including Drive-away locking) may cause the security system to ignore any unlock or lock requests.