

Interior lamps.....	53
ambient lighting.....	53
bulb changing.....	159
types.....	53
Interior locking.....	15

## J

Jump starting	
connecting a starting aid.....	174
connecting jump leads.....	173
disconnecting jump leads.....	174

## K

Keyless entry.....	9
--------------------	---

## L

Label locations.....	215
Lamps.....	50
auto lamps wiper detection.....	51
bulb changing.....	159
condensation.....	52
test.....	45
TPMS warning lamp.....	48
warning lamps.....	45
xenon headlamps.....	160
Leather cleaning.....	163
Licensing	
audio/video.....	109–110
Lighting	
ambient lighting.....	53
interior lamps locations.....	53
Limp home mode.....	88
Load carrying	
cover.....	75
Load securing.....	76
Loadspace	
emergency release.....	75
Loadspace cover.....	75
Locking.....	15
automatic relocking.....	16
door locks and release levers.....	15
drive away.....	10
emergency locking.....	16

in an emergency.....	16
mislock.....	15
security sensor fault.....	16
with the emergency key.....	16
Locking and arming the alarm.....	15
Lubricants specifications.....	217
Luggage compartment	
anchor points.....	76
cover.....	75
emergency release.....	75

## M

Maintenance	
air conditioning.....	155
brake fluid level.....	168
breaking-in.....	156
bulb changing.....	159
capacities.....	223
changing a fuse.....	177
checking tyre pressure after a repair.....	207
cleaning	
alloy wheels.....	161
exterior.....	161
glass.....	162
interior.....	162–163
leather.....	163
parking aid sensors.....	98
rear screen.....	162
the engine compartment.....	162
closing the hood.....	158
clutch fluid level.....	168
daily checks.....	156
disconnecting jump leads.....	174
engine compartment fuse box.....	178
engine coolant level.....	167
engine oil level.....	165
fuel system.....	157
fuse box (passenger compartment).....	181
jump starting.....	174
label locations.....	215
lubricants and fluid specifications.....	217
luggage compartment fuse box.....	187
oil top up.....	166
paintwork repair.....	161